SAMSUNG

Operating Instructions

VACUUM CLEANER

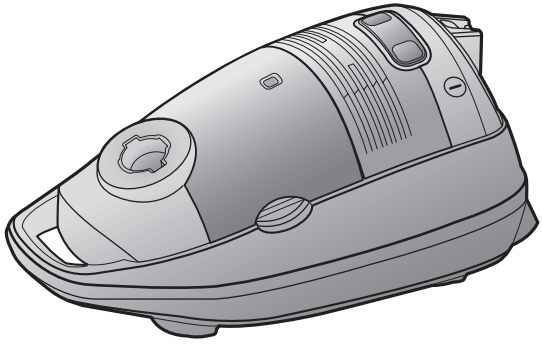

❊ Before operating this unit, please read the instructions carefully.
❊ For Indoor use only.

Register your product at www.samsung.com/register

DJ68-00364C REV(0.2)

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. WARNING: Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
   Children should be supervised to ensure that they do not play with the appliance.
4. Do not use the vacuum cleaner without the dust bag. Empty the dust bag before it is full in order to maintain the best efficiency.
5. Slide to the Stop(or Min)position before inserting a plug into the electrical outlet.
6. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
7. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.
8. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect cord from the electrical outlet before caring the dust bag and filters.
9. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.
10. The use of an extension cord is not recommended.
11. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. The vacuum cleaner is provided with a self-resetting thermal cut-out protection which automatically shut off current on over heating. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and cooling the motor, vacuum cleaner automatically start again.

1 ASSEMBLING THE CLEANER

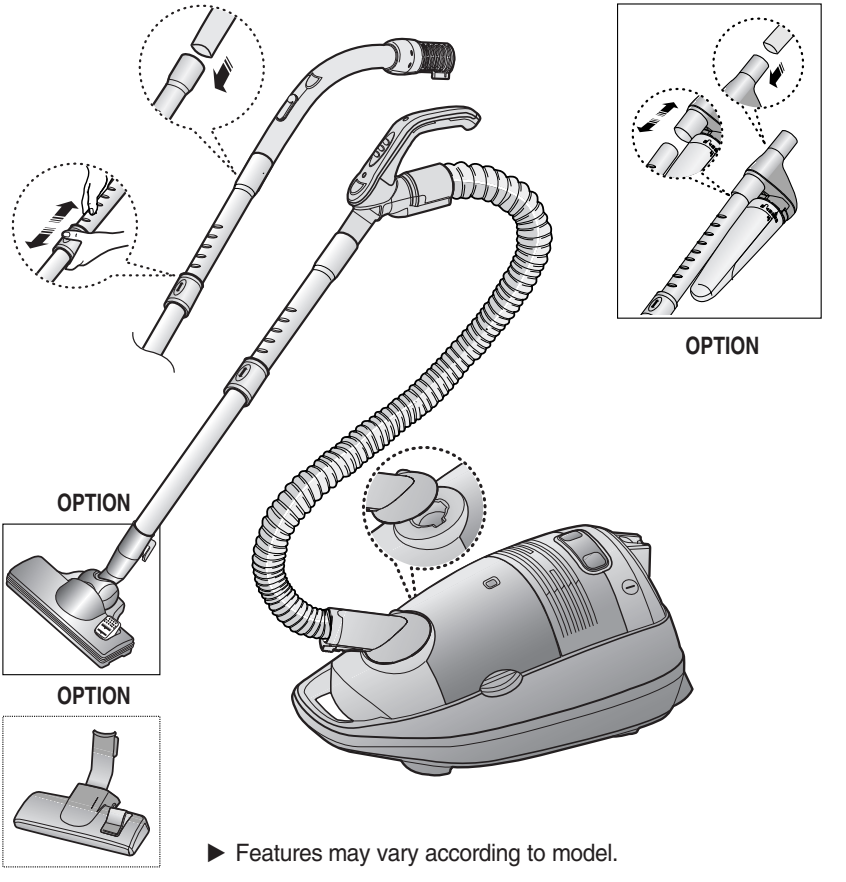

► Features may vary according to model.

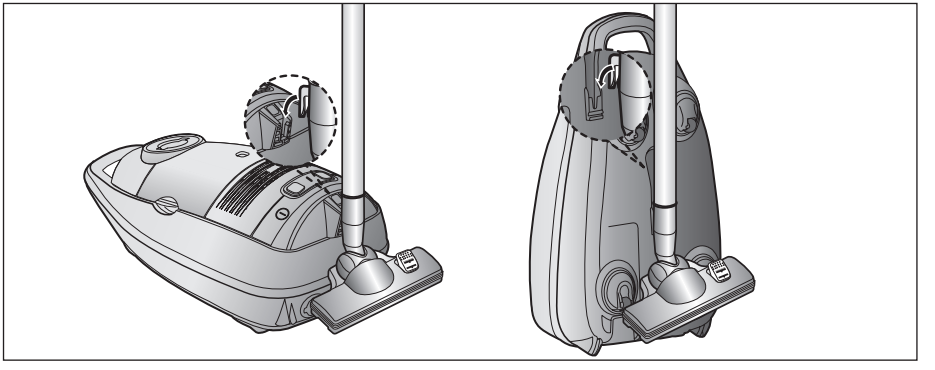

Parking floor nozzle for easier storage.

2 OPERATING THE CLEANER

2-1 POWER CORD

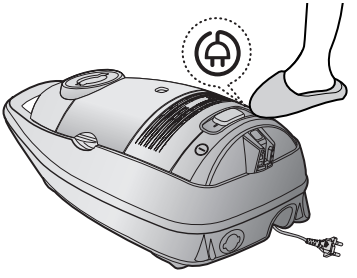

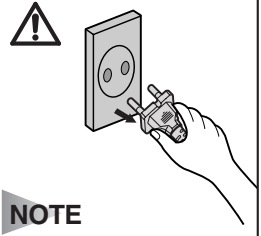

NOTE
Grasp the plug to disconnect cord from the electrical outlet.

2-2 ON/OFF SWITCH

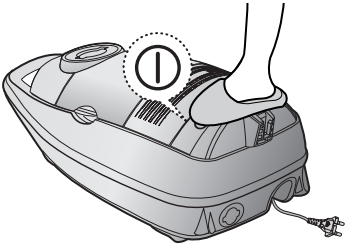

2-3 POWER CONTROL

1) BODY-CONTROL TYPE

MIN = For delicate surface e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.

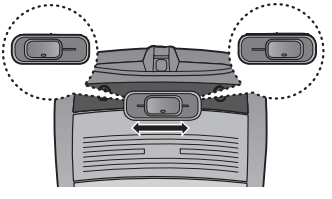

2) REMOTE-CONTROL TYPE

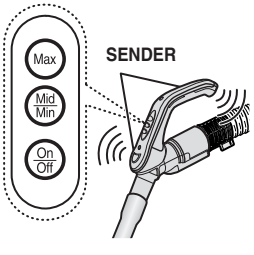

INFRARED-CONTROL

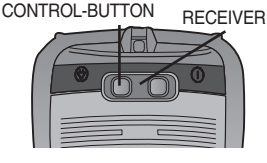

Press control button repeatedly to select correct mode.
(STOP → MIN → MID → MAX → STOP)

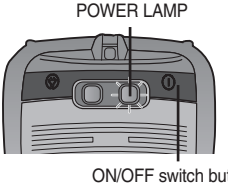

When pushed the "ON/OFF" switch button, the Power lamp is turned on automatically.

2-4 AIR CONTROL

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

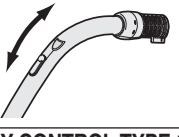

BODY CONTROL TYPE ONLY

2-5 USING THE BLOWER

Located on the left rear side of the cleaner.

1) Disconnect the hose from the body of the cleaner.
2) Connect the hose clamper to the blow hole.

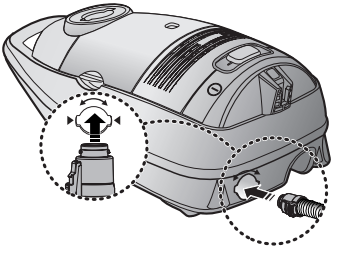

2-6 USING THE ACCESSORIES

- Dusting brush - for furniture, shelves, books, etc.
- Upholstery brush - for cushions and drapery.
- Crevice tool - for radiators, crevices, comers, between cushions.

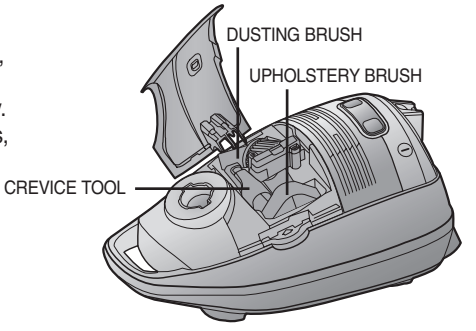

2-7 USING FLOOR TOOLS

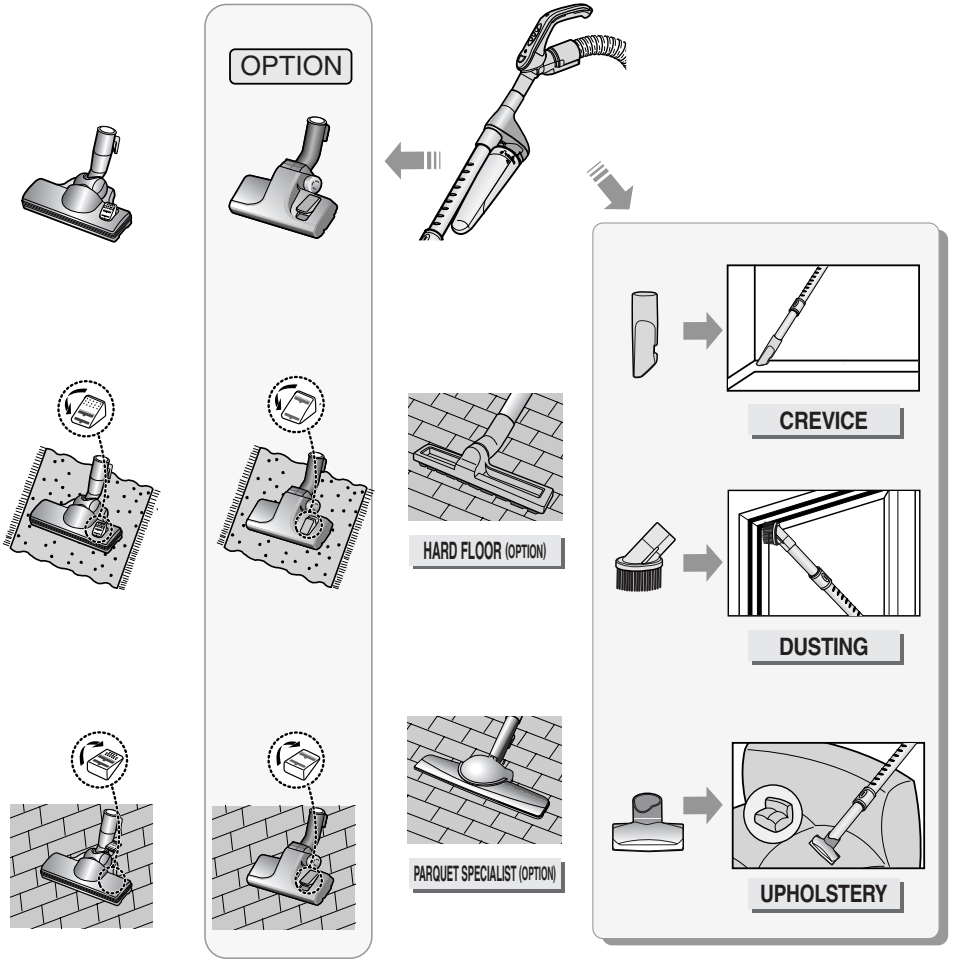

3 DUST FULL INDICATOR

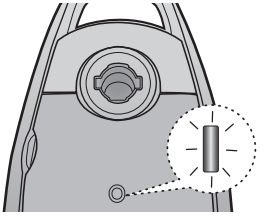

If the "Dust Full" indicator turns to red color while you are cleaning, the dust bag requires replacement

NOTE : If the "Dust Full" indicator continues to display red color even after having changed bag into new one, turn the cleaner off and check if there is any clogging in the hose, tube, floor nozzle, or on the inlet/outlet filter.

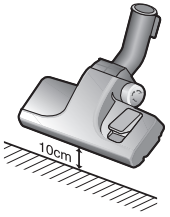

If the filter check indicator turns red with the inlet floating 10 cm above flat floor, clean it.

3-1 CHANGING THE DUST BAG

1

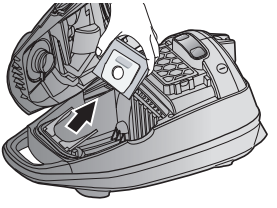

2

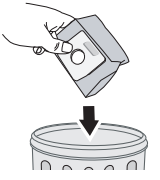

3

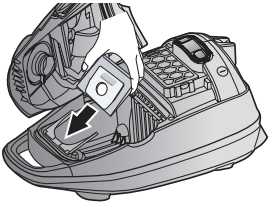

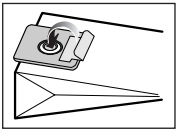

NOTE : A used dust bag can be sealed by removing the paper from the adhesive strip and sealing the strip over the hole.

OPTIONAL

• FOR CLOTH BAG
After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

4 CLEANING THE CYCLONE FILTER(OPTIONAL)

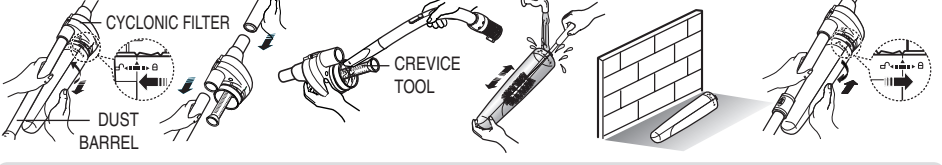

NOTE : The Cyclone Filter must be used at all times to retain optimum efficiency.

5 CHANGE THE BATTERY(OPTIONAL)

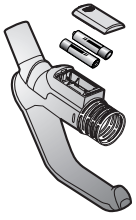

BATTERY TYPE : AA Size

NOTE : When the vacuum cleaner does not operate, replace the batteries. If the problem persists, please contact our authorized dealer.

WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+),(-) terminals.
4. Dispose the batteries properly.

6 CLEANING THE INLET FILTER

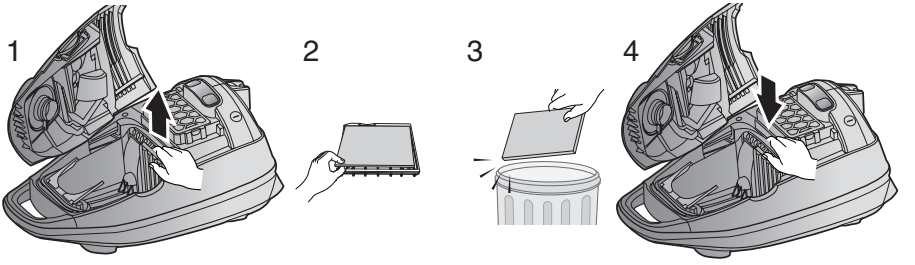

NOTE : Don't throw away the filter

7 OUTLET FILTER

OPTION : HEPA H11 + SILVER NANO

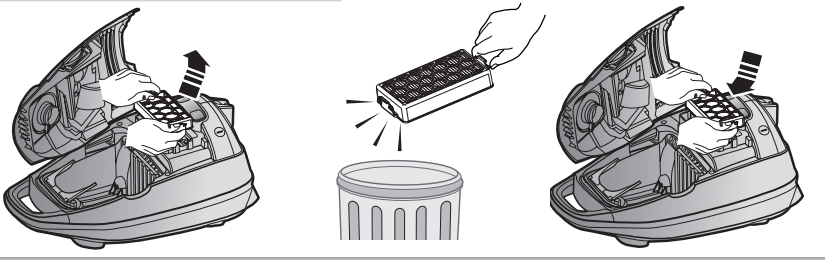

OPTION : HEPA H11

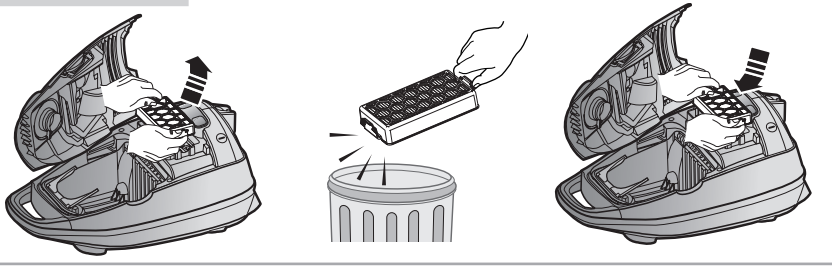

OPTION-MICRO FILTER + SILVER NANO

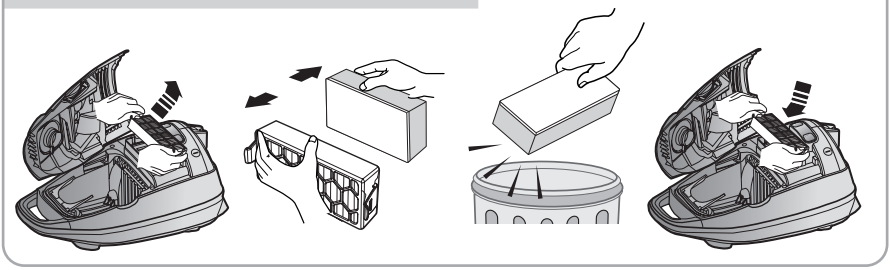

OPTION-MICRO FILTER

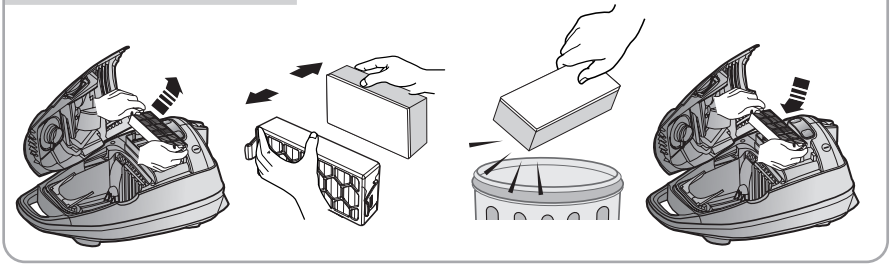

NOTE : Replacement filters or bags can be bought from your local Samsung distributor.

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Check for blockage and remove.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.
Low or decreasing suction	Filter is full with dust.	Please check filter and, if required, clean as illustrated in the instructions.

تعليمات التشغيل

SAMSUNG

المكنسة الكهربائية

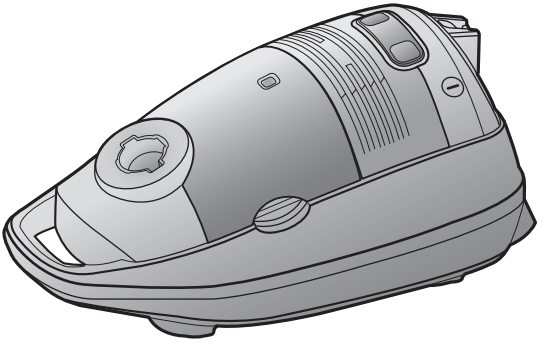

* يرجى قراءة هذه التعليمات بعناية قبل تشغيل هذه الوحدة.
* للاستعمال الداخلي فقط.

قم بتسجيل منتجك على www.samsung.com/register

DJ68-00364C REV(0.2)

تعليمات هامة للسلامة

١. اقرأ هذه التعليمات بعناية. قبل تشغيل الوحدة، تأكد من معدل الجهد الكهربي لمصدر التيار لديك ومن كونه نفس المشار إليه على لوحة المواصفات أسفل المكنسة.

٢. تحذير : لا تستعمل المكنسة الكهربائية على سجاد أو أرض مبللة.
لا تستعملها لشفط الماء.

٣. هذا الجهاز غير مخصص ليستعمله الصغار أو غير المدركين إلا تحت إشراف شخص بالغ لضمان استعماله بالشكل الصحيح. يجب أن أي يكون الصغار تحت المراقبة للتأكد من عدم عبثهم بالجهاز.

٤. لا تستعمل المكنسة الكهربائية بدون كيس الغبار. أفرغ كيس الغبار قبل امتلائه للحصول على أعلى مستوى كفاءة من المكنسة.

٥. حرك إلى موضع الإيقاف أو (Min) قبل إدخال الفيشة بمصدر التيار.

٦. لا تستعمل المكنسة لالتقاط أعواد الكبريت، أو الرماد المشتعل أو أعقاب السجائر.
اترك المكنسة الكهربائية بعيدة عن المواقد أو أي مصدر للحرارة. فالحرارة قد تتسبب في تغيير شكل أو لون القطع البلاستيكية بالوحدة.

٧. تجنب التقاط الأشياء الصلبة والحادة باستعمال المكنسة الكهربائية فقد تؤدي إلى تلف قطع التنظيف. لا تقف فوق الخرطوم. لا تضع أي أوزان على الخرطوم. لا تسد فتحة الشفط أو قطعة تفريغ الهواء.

٨. أوقف تشغيل المكنسة الكهربائية قبل فصلها عن مصدر التيار. أمسك الفيشة لفصل السلك عن مصدر التيار قبل التعامل مع كيس الغبار والفلاتر.

٩. يجب نزع الفيشة من المقبس قبل تنظيف أو صيانة الجهاز.

١٠. لا ينصح باستعمال سلك التمديد.

١١. إن كانت المكنسة لا تعمل بشكل طبيعي، فأوقف تشغيلها وافصلها عن التيار ثم استشر وكيل الخدمة المعتمد.

١٢. إن تلف سلك التيار، يجب استبداله من قبل جهة التصنيع أو وكيل الخدمة أو الفني المختص لتجنب المخاطر.

١٣. هذه المكنسة مزودة بخاصية الحماية الذاتية ضد ارتفاع درجة الحرارة، حيث يتم إيقاف تشغيل الوحدة إن ارتفعت حرارتها. فإن ارتفاع درجة الحرارة قد يكون سببه انسداد الفلتر أو الفوهة أو الأنبوب أو الخرطوم. بعد التخلص من السبب وتبريد المحرك، ستعمل المكنسة الكهربائية ثانية بشكل تلقائي.

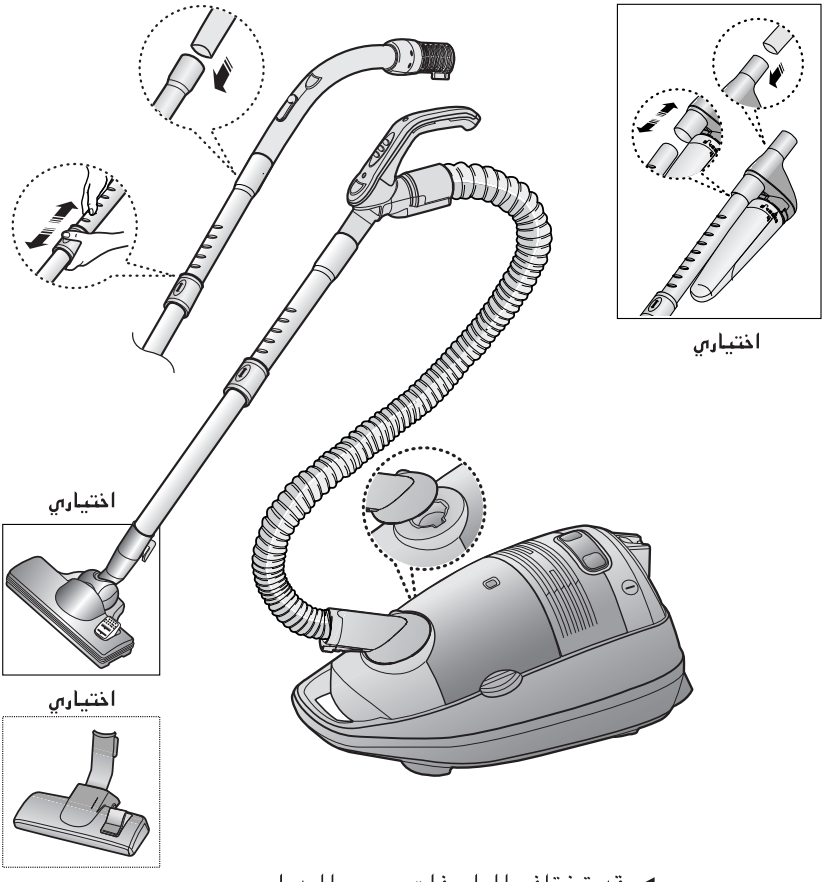

◄ قد تختلف المواصفات حسب الموديل.

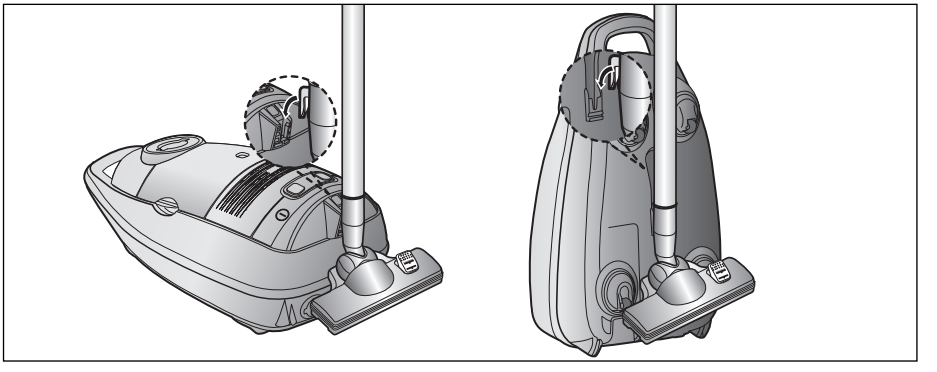

وضع فوهة الأرض في وضع رأسي لسهولة تخزينها.

٢ تشغيل المكنسة

٢-١ سلك التيار

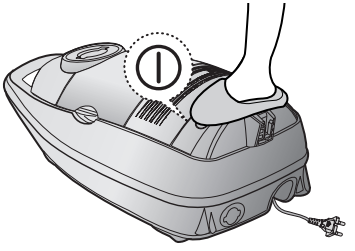

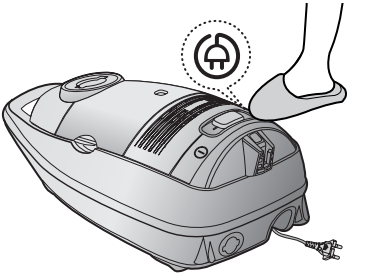

ملاحظة

أمسك الفيشة لفصل السلك عن مصدر التيار.

٢-٣ التحكم في الشفط

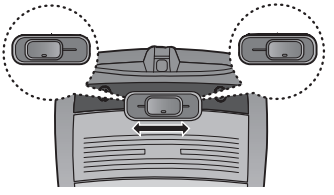

١) **نوع التحكم من جسم المكنسة**

MIN = للأسطح الرقيقة مثل الستائر الشبكية.

MAX = للأرضيات الصلبة والسجاد المتسخ للغاية.

٢) **نوع التحكم بجهاز التحكم عن بعد**

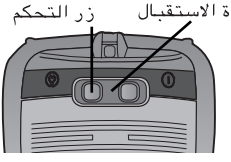

اضغط على زر التحكم مرارًا لاختيار الوضع المطلوب.

(STOP → MIN → MID → MAX→ STOP)

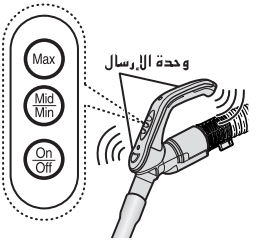

التحكم بالأشعة تحت الحمراء

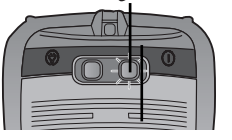

مفتاح التشغيل/الإيقاف

عند الضغط على زر « ON/OFF »، يضاء مصباح الطاقة تلقائيًا.

٢-٤ التحكم في الهواء

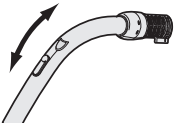

نوع التحكم من جسم المكنسة فقط

لتقليل قوة الشفط لتنظيف الستائر وأغطية الأثاث، والسجاد الصغير، وغيرها من المنسوجات الخفيفة.

اسحب محبس الهواء إلى أن تفتح الفتحة.

٢-٥ استعمال المنفاخ

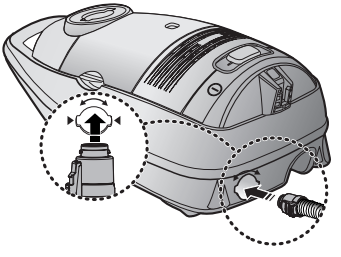

موجود في الجهة الخلفية اليسرى من المكنسة الكهربائية.

١) افصل الخرطوم عن جسم المكنسة الكهربائية.

٢) قم بتوصيل مثبت الخرطوم في فتحة النفخ.

٢-٦ استعمال الكماليات

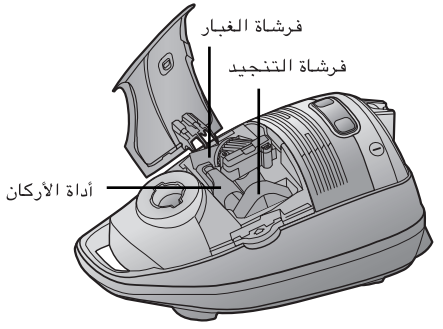

- فرشاة الغبار – للأثاث، الأرفف، الكتب، وغيرها
- فرشاة التنجيد – للستائر وأغطية الأثاث.
- أداة الأركان – للشقوق، والأركان، وما بين الوسائد.

٢-٧ استعمال أدوات الأرضيات

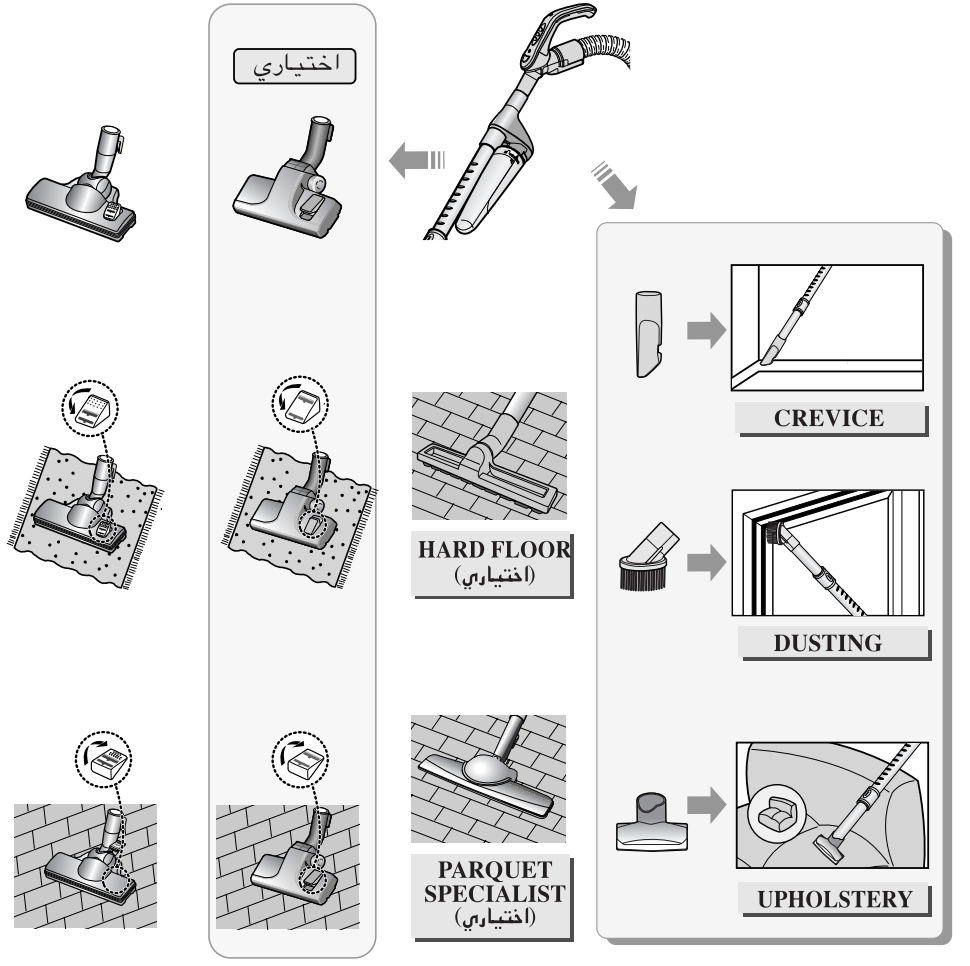

٣ مؤشر الامتلاء بالغبار

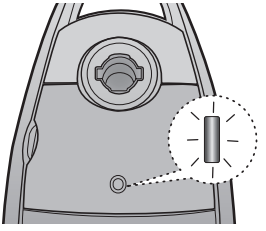

إن أضاء مؤشر الامتلاء بالغبار باللون الأحمر أثناء التنظيف، يحتاج كيس الغبار إلى استبداله.

ملاحظة: إن استمر مؤشر الامتلاء بالغبار باللون الأحمر حتى بعد استبدال الكيس بآخر كبير، فأوقف تشغيل المكنسة وتحقق من وجود ما يسد الخرطوم أو الأنبوب أو فوهة الأرضيات أو فلتر إدخال وإخراج الهواء.

إذا تحول مؤشر فحص الفلتر إلى اللون الأحمر مع ارتفاع المدخل بمقدار ١٠ سم فوق أرضية مسطحة، قم بتنظيف الفلتر.

٣-١ تغيير كيس الغبار

١

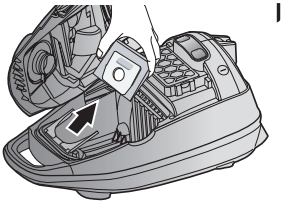

٢

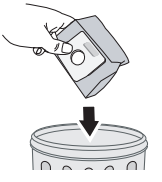

٣

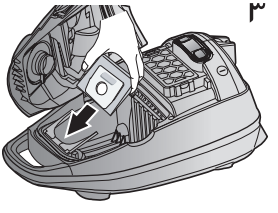

ملاحظة: كيس الغبار المستخدم يمكن ربطه بنزع الورقة من الشريط اللاصق ثم ربط الشريط فوق الفتحة.

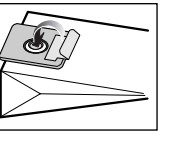

اختياري

- بالنسبة للكيس القماشي بعد الاستعمال، إن امتلأ الكيس بالغبار، فنظف الكيس القماشي ثم استعمله مرة أخرى. اختياري

٤ تنظيف الفلتر الحلزوني (اختياري)

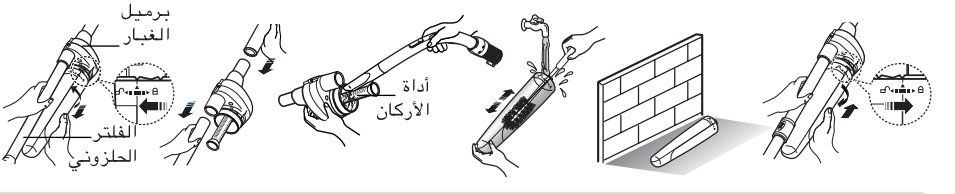

ملاحظة : يجب استعمال الفلتر الحلزوني Cyclone Filter دومًا للحصول على أفضل مستوى كفاءة.

٥ تغيير البطارية (اختياري)

نوع البطاريات: حجم AA

ملاحظة : إن لم تستطع تشغيل المكنسة، فاستبدل البطاريات.
إن استمرت المشكلة، فاتصل بالموزع المعتمد.

تحذير ⚠

١. لا تفك البطاريات أو تعيد شحنها.
٢. لا تسخن البطاريات أبدًا أو تلقي بها في النار.
٣. لا تعكس أطراف القطبية (+)،(−).
٤. تخلص من البطاريات بطريقة صحيحة.

٦ تنظيف فلتر إدخال الهواء

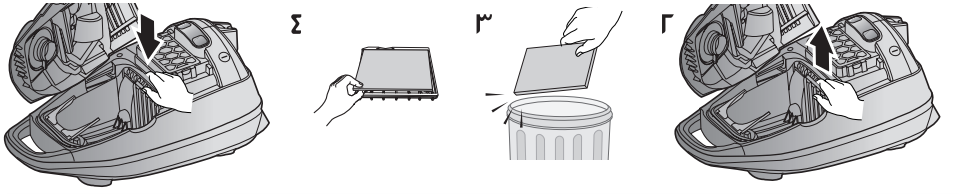

ملاحظة : لا تتخلص من الفلتر

٧ فلتر إخراج الهواء

اختياري: HEPA H11 + SILVER NANO

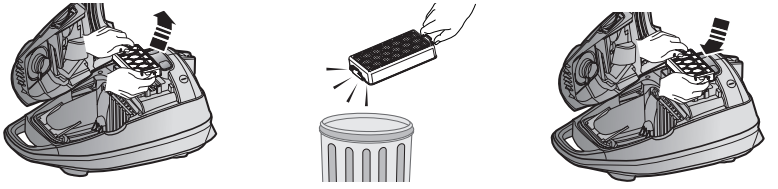

اختياري: HEPA H11

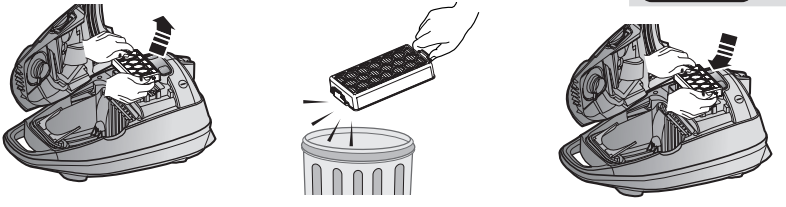

خيار- MICRO FILTER + SILVER NANO

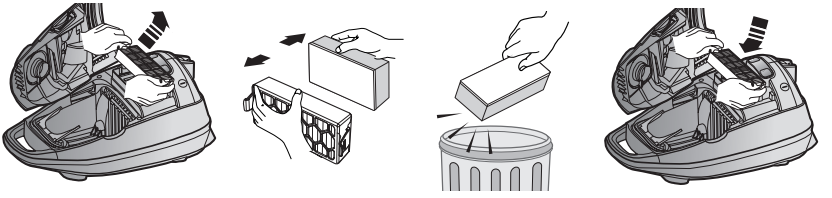

خيار- MICRO FILTER

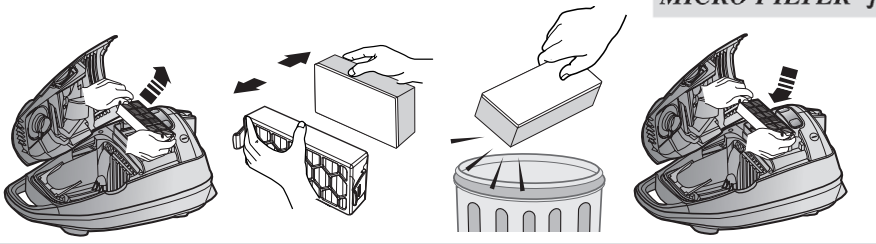

ملاحظة : يمكن شراء قطع غيار الفلاتر من موزع سامسونج المحلي.

- إن كانت لديك مشكلة

المشكلة	السبب	الحل
المحرك لا يعمل.	التيار غير موصل. توقف بسبب الحرارة.	افحص الكبل والفيشة والمقبس.
قوة الشفط تقل تدريجيًا.	انسداد الفوهة أو خرطوم الشفط أو الأنبوب.	تحقق من وجود انسداد وتخلص منه.
السلك لا يلف بالكامل.	تأكد من أن السلك غير ملتو أو ملفوف بشكل غير مستو.	اسحب السلك إلى الخارج ٢-٣ م ثم اضغط على زر لف السلك.
المكنسة لا تلتقط الأوساخ.	وجود شرخ أو فتحة بالخرطوم.	افحص الخرطوم واستبدله إذا لزم الأمر.
قوة الشفط منخفضة أو تقل .	الفلتر مملوء بالغبار.	افحص الفلتر ونظفه إذا لزم الأمر كما سبق توضيحه في تعليمات التنظيف.

.أسئلة أو استفسارات عن منتجات سامسونج يرجى الاتصال بخدمة عملاء شركة سامسونج

Country	Customer Care Center ☎	Web Site
U.A.E	800SAMSUNG (7267864)	www.samsung.com/ae